

20W/40W PA MIXER-AMPLIFIER 70V/100V

Model: DA20T/DA40T User Manual

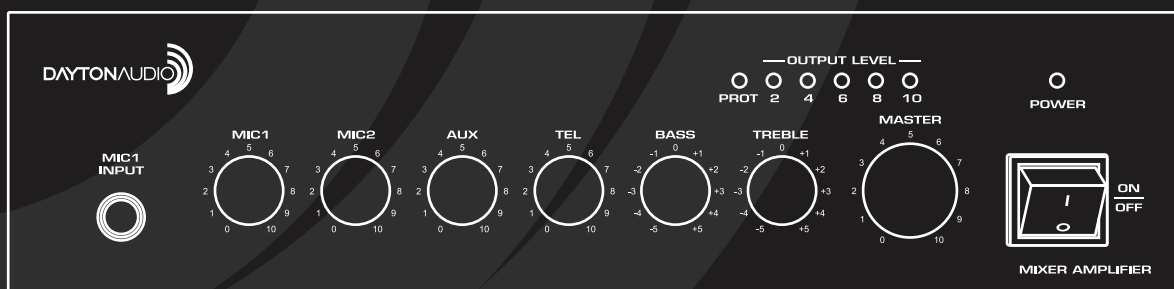


TABLE OF CONTENTS

1. SAFETY PRECAUTIONS	3
2. GENERAL DESCRIPTION.....	5
3. FEATURES AND FUNCTIONS	
3.1 Front Panel	6
3.2 Rear Panel.....	6
4. CONNECTIONS	
4.1 Speaker Connections	7
5. OPERATION.....	7
6. APPLICATIONS.....	8
7. APPLICATION DIAGRAM.....	9
8.SPECIFICATIONS	10
9.DIMENSIONAL DIAGRAM	11

1.SAFETY PRECAUTIONS

- Be sure to carefully read all the safety instructions in this manual before use.
- Be sure to follow all safety instructions in this manual.
- Please keep this instruction manual for future reference.

Safety Warning and Cautions

Safety Cautions and Warnings are used in this manual to prevent bodily injury and property damage. Before operating this product please read and follow all safety precautions to avoid potential safety risks.



WARNING

Indicates a potentially hazardous situation which could result in serious personal injury or death.



CAUTION

Indicates a potentially hazardous situation which could result in minor or major personal injury or property damage.



WARNING

When Installing the Unit

- Do not expose this product to rain or an environment where it could be splashed by water or other liquids.
- Only use this product with the voltage specified. Using higher voltage may result in fire or electric shock.
- Do not cut, kink, damage or modify the power cord. Avoid using the power cord in close proximity to heaters, and never place heavy objects on the cord. This could result in electric shock or fire.
- Be sure to replace the speaker terminal cover after the connections are complete. High voltage is applied to the speaker terminals. To avoid electric shock, never touch these terminals.
- Be sure you ground the amplifier using the safety ground (earth) terminal to avoid electric shock. Never ground this product to a gas pipe or other flammable items.
- Avoid installing or mounting this product on an unstable or slanted surface. Doing so may cause the unit to fall, resulting in personal injury or property damage.

When the Unit is in Use

- Should any of the following issues occur during use, immediately switch off the power and disconnect the power cord from the AC outlet. Make no further attempt to operate the malfunctioning product, doing so may cause fire or electric shock. Contact your Dayton Audio dealer for service and repair.
 1. If you detect smoke or a strange smell coming from the unit.
 2. If any liquid or metal gets inside the product.
 3. If the product is dropped or falls and case is broken.
 4. If the power cord is cut or damaged.
 5. If the sound becomes distorted.
- To prevent a fire or electric shock, never open or remove the product cover; there are high voltage components inside. Refer all servicing and repair to your nearest Dayton Audio dealer.
- Do not place cups, bowls, or anything containing liquid or metal objects on top of the product.
- To prevent fire or electric shock, do not insert metal objects or flammable materials in the cover or vents of this product.

SAFETY PRECAUTIONS

CAUTION

When Installing the Unit

- Never plug in or remove the power cord with wet hands, doing so may cause electric shock.
- When unplugging the power cord, be sure to grasp the power cord plug; never pull on the cord itself. Operating the unit with a damaged power cord may cause a fire or electric shock.
- When moving the unit, be sure to remove the power cord from the wall outlet. Moving the unit with the power cord connected to the outlet may cause damage to the power cord or cause you to accidentally drop the product, resulting in personal or property damage.
- Do not block the ventilation areas in the cover. Doing so may cause heat to build up inside the unit, resulting in product failure and possibly fire.
- Avoid installing the unit in humid or dusty locations, direct sunlight, near heaters or in locations generating sooty smoke/steam.
- Do not place heavy objects on top of the product. This can result in the product or object to fall, causing personal injury or property damage.
- Before powering on the product make sure that the master volume control is set to the lowest setting. Loud or high volume noise can damage or impair hearing.
- Do not operate the unit if the sound is distorting. This is an indication of a product malfunction, immediately unplug the power and contact your Dayton Audio dealer for service or repair.
- Dust allowed to accumulate inside the product could result in fire or electrical damage. Be sure to consult your Dayton Audio dealer for cleaning service and repair. Periodically clean dust buildup from the power cord plug and wall outlet to avoid electrical fire. Ensure the power cord plug is securely inserted in the wall outlet.
- For safety when cleaning or leaving the unit unattended for long periods of time, switch the power off, unplug the power cord plug from the wall outlet. Doing otherwise may cause a fire or electric shock.


An all-pole mains switch with a contact separation of at least 3 mm in each pole shall be incorporated in the electrical installation of the building.

2. FEATURES

1. Rated Power: 60W/120W.
2. 100V, 70V constant voltage outputs and 4~16 ohms constant resistance output.
3. Commercial grade toroidal transformers produce high performance audio on a wide range of frequencies with minimum noise and high fidelity even at high volume.
4. Protection against overload, short circuit and power fluctuation for optimum reliability.
5. VOX feature mutes AUX inputs when input is detected on MIC 1. Time fade adjustment control allows resumption of music to be quick or gradual.
6. Phantom power available on MIC 1 input for condenser type microphones.
7. TEL priority: TEL input will override AUX 1-2 and MIC 1-2.

3. FEATURES AND FUNCTIONS

3.1 FRONT PANEL

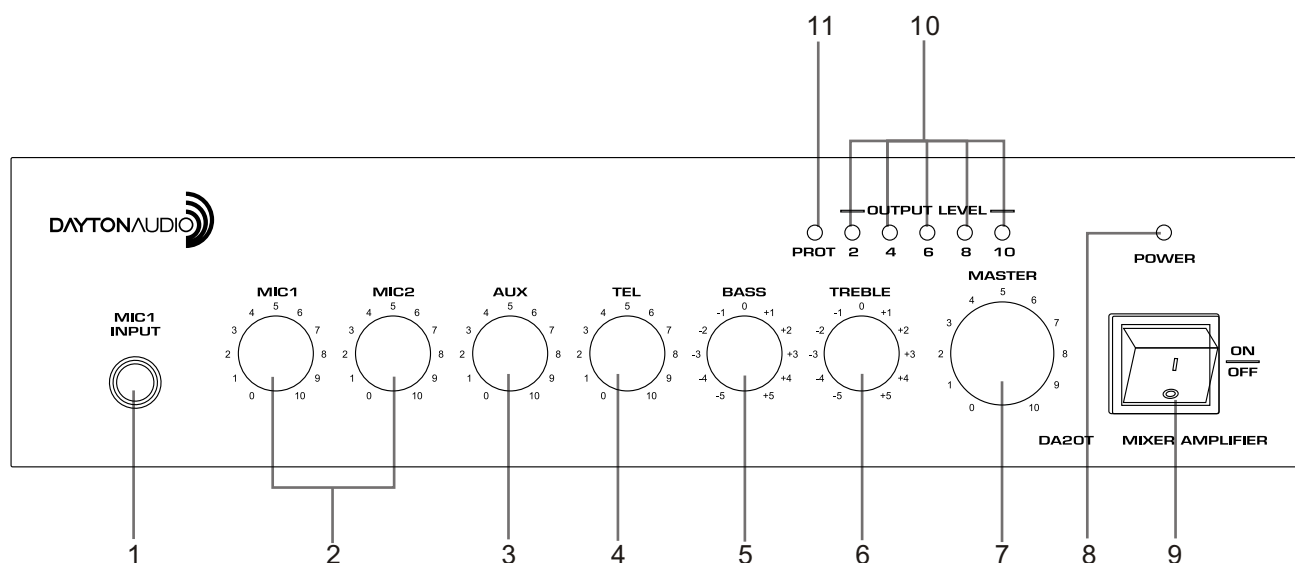

1. MIC1 INPUT

MIC1 1/4" phone jack input

2. MIC1/MIC2

MIC volume controls (MIC1/MIC2)

3. AUX1/AUX2

Volume control AUX

4. TEL

Volume control TEL

5. BASS

Bass response adjustment. Rotate clockwise to increase bass output and counterclockwise to reduce it.

6. TREBLE

Treble response adjustment. Rotate clockwise to increase treble output and counterclockwise to reduce it.

7. MASTER

Master volume control

8. POWER

Power indicator

9. POWER SWITCH

ON/OFF toggle switch

10. LEVEL INDICATORS

Signal output level indicators


11. PROT

Protection mode status indicator.

This indicator will illuminate if the product is in protection mode due to overheating or overload.

FEATURES AND FUNCTIONS

3.2 REAR PANEL

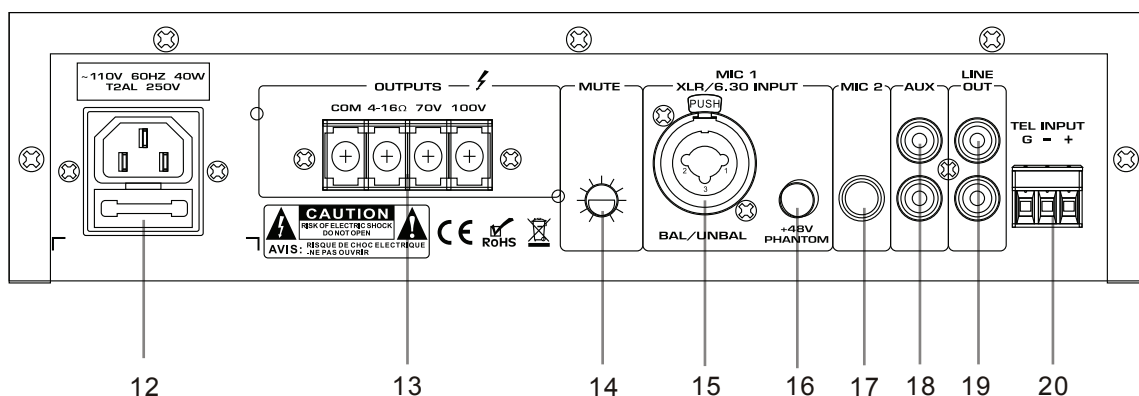


- | | |
|--|--|
| 12. ~110V 60Hz POWER INPUT | 16. MIC 1 PHANTOM
+48V Power switch |
| 13. SPEAKER TERMINALS
Connectors for 4-16 ohms or 70V and
100V speaker | 17. MIC 2 INPUT
Compatible with 1/4" phono plug |
| 14. MUTE ADJUSTMENT
Adjusts the mute level from -18 dB to -40 dB
during signal override of all channels by
MIC1 input | 18. AUX INPUT
Compatible with RCA plug |
| 15. MIC1 INPUT
Compatible with XLR and 1/4" phono plugs | 19. LINE OUT
Compatible with RCA plug |
| | 20. TEL INPUT G/-/+/- |

Notice:

1. The AC power voltage must be within $\pm 10\%$ of the nominal working voltage of the equipment.
2. Please turn off all equipment before changing any connection, otherwise it may cause damage to hearing and equipment.
3. When the equipment is powered on, it is forbidden to hot-plug the input terminal wire, otherwise the equipment may be damaged.

4. CONNECTIONS

4.1 SPEAKER CONNECTIONS

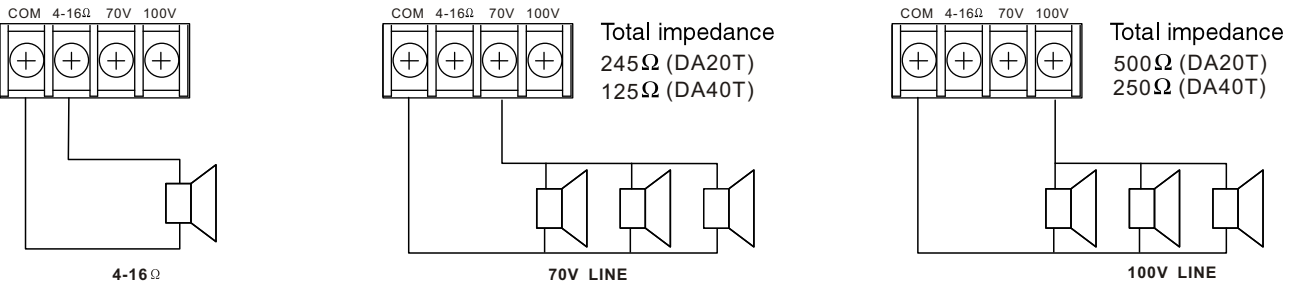

Notes


- The 4-16 ohm and 70V/100V terminals cannot both be used at the same time.
- Impedances indicated in the figures represent the total speaker system (load) impedances.

⚠ WARNING

Be sure to replace the speaker terminal cover after speaker connections have been made.

4.2 XLR CONNECTIONS

Combined XLR (female)/phone jack connectors.

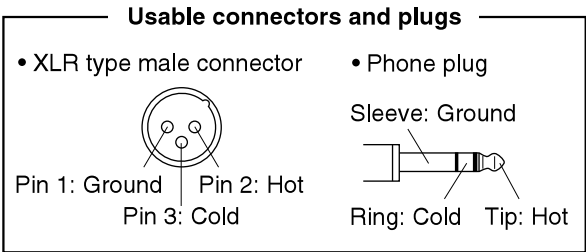

5. OPERATION

OPERATION

You can only choose two of the four output connectors to work together. If voltage is 70V/100V the speakers must have a transformer, make sure the total power wattage of speaker is 15% less than the power wattage of amplifier.


MUTE FUNCTION

1. TEL has priority over all inputs.
2. MIC 1 is second priority, adjusting the mute level will override all other input signals except for the TEL signal.
Note: MIC 1 always has priority over all other input signals, and will always duck other audio when audio is present on MIC 1 input.


TROUBLESHOOTING

Problems	Cause
All wires are connected properly but there is no audio output	<ol style="list-style-type: none">1. No power or wrong connection2. Fuse is blown3. Volume is turned off4. No input signal
Alarm sounds when power is turned on	<ol style="list-style-type: none">1. Overloading or short circuit2. Voltage is not stable, too high or low
No output	<ol style="list-style-type: none">1. Product is in protection mode due to high temperature or malfunction2. Wrong wiring or connections

6. APPLICATIONS

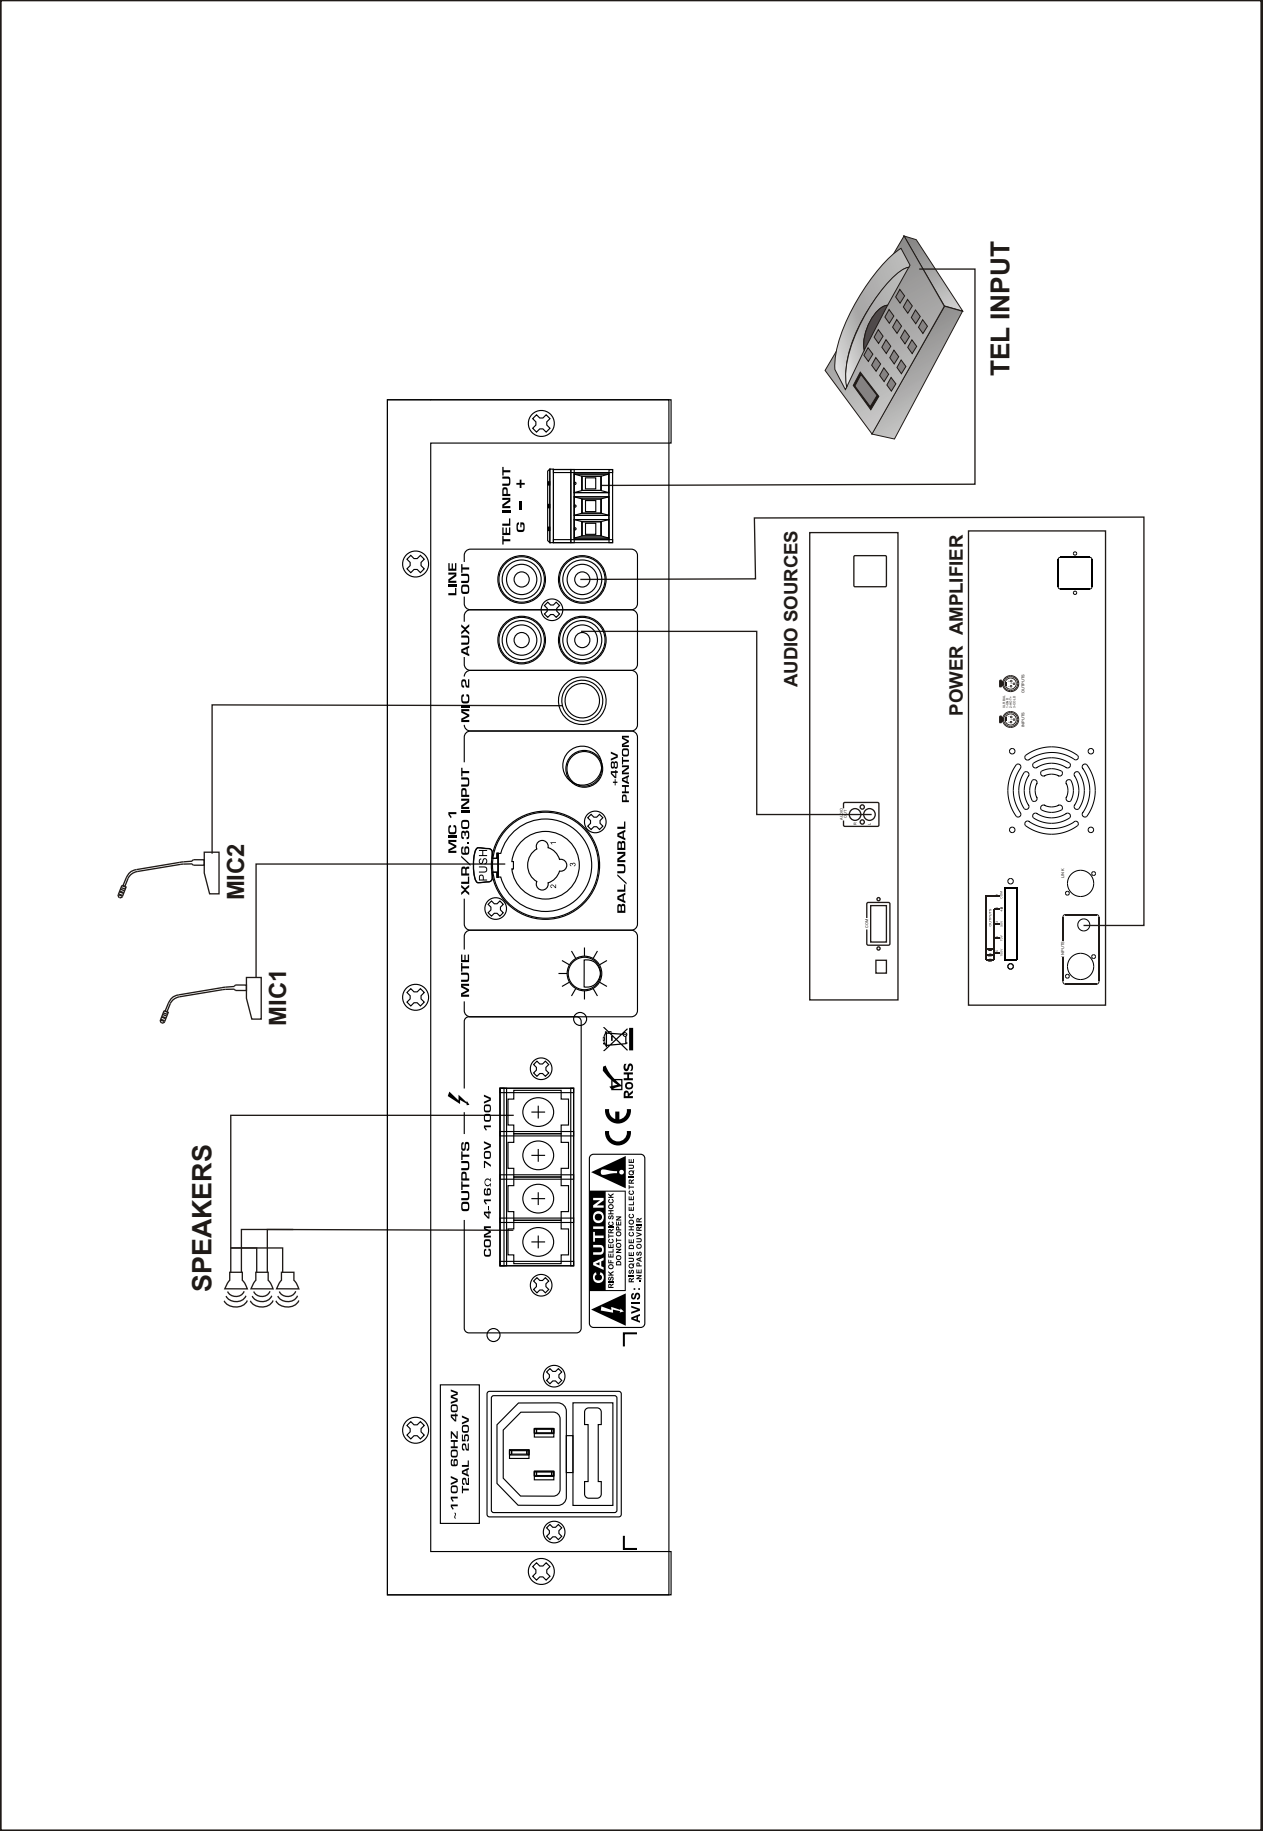

7. APPLICATION DIAGRAM

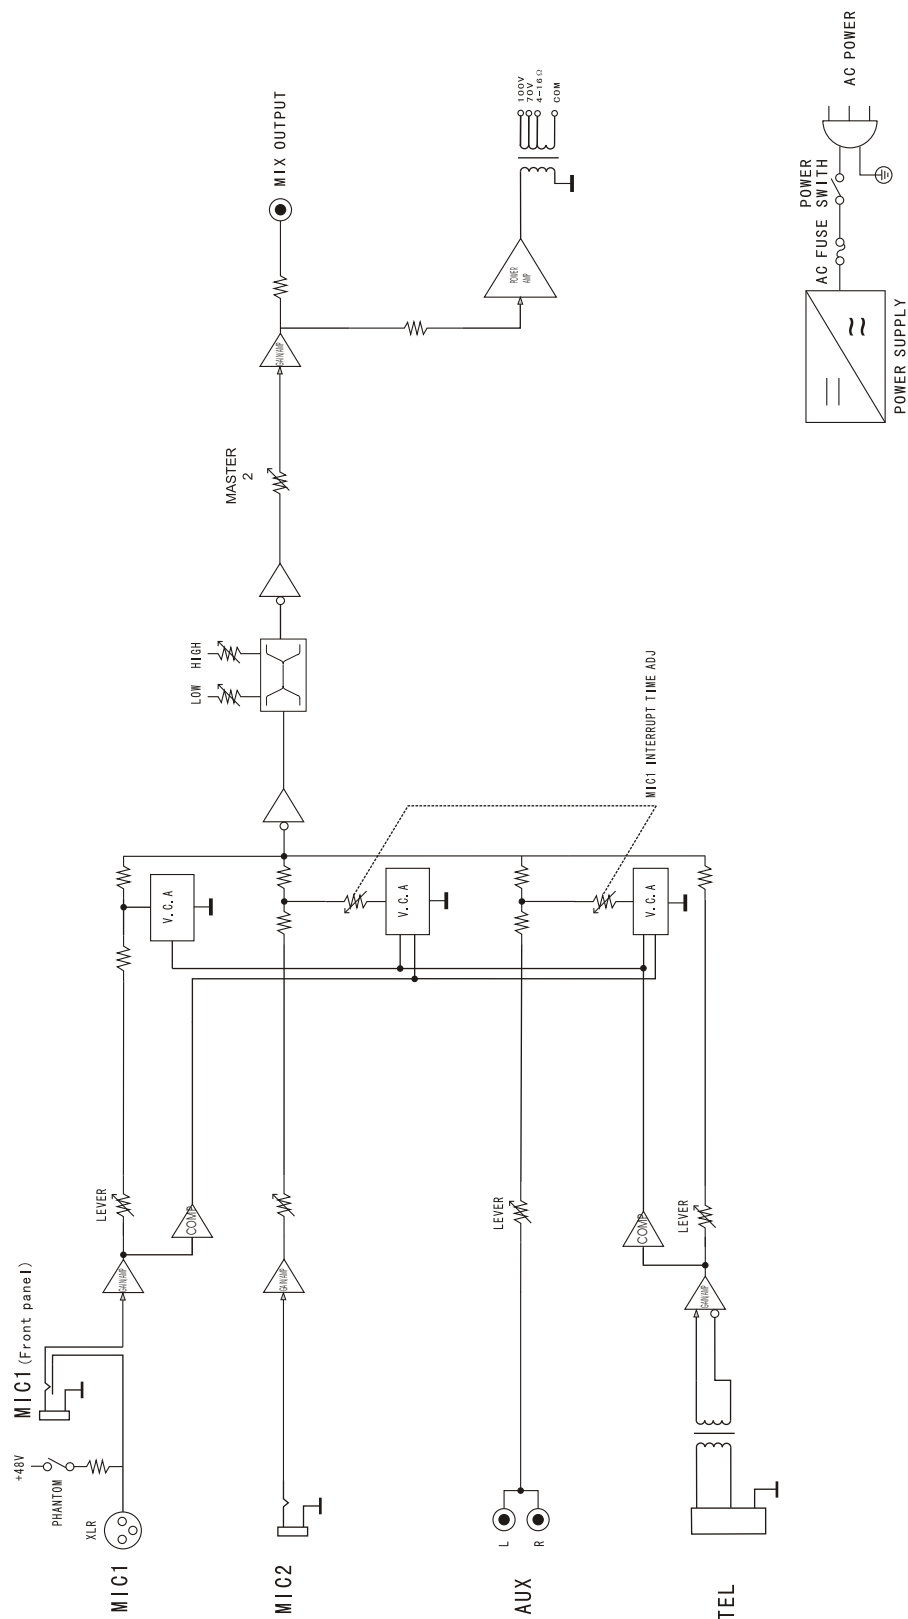


8. SPECIFICATIONS

MIXER AMPLIFIER		
Model	DA20T	DA40T
Rated power output	20W	40W
Speaker output	4~16Ω, 70V, 100V	
S/N	MIC: 66 dB; AUX: 80 dB	
Frequency response (At 1 kHz half-power output,-3 dB)	80-16,000 Hz	
Tone control (Bass: 100Hz, Treble: 10 kHz)	±10 dB	
Input sensitivity/impedance	MIC1,2: 5mV/1,000 ohms AUX: 350mV/10,000 ohms TEL: 350mV/10,000 ohms	
Line out	1,000mV/470 ohms	
Total harmonic distortion	Less than 0.5%	
Muting function	TEL takes precedence over all the audio input MIC1 prior to the other audio input (except TEL)	
Channel crosstalk (Separation)	50 dB	
Cooling mode	Air cooling	
Power source	~110V, 60Hz	
Power consumption	40W	70W
Net weight	7.94 lbs.	9.92 lbs.
Dimensions	10.87" W x 9.65" D x 2.76" H	
MIC 1~2 input section (CH1~2 in @ 1 kHz, preamp out)		
Input sensitivity/impedance	5mV/1,000 ohms	
AUX 1 input section (AUX in @ 1kHz, preamp out)		
Input sensitivity/impedance	350mV/10,000 ohms	
TEL input section (TEL in @ 1kHz, preamp out)		
Input sensitivity/impedance	350mV/10,000 ohms	
Phantom power	+48 VDC	


9. DIMENSIONAL DIAGRAM

UNIT: mm

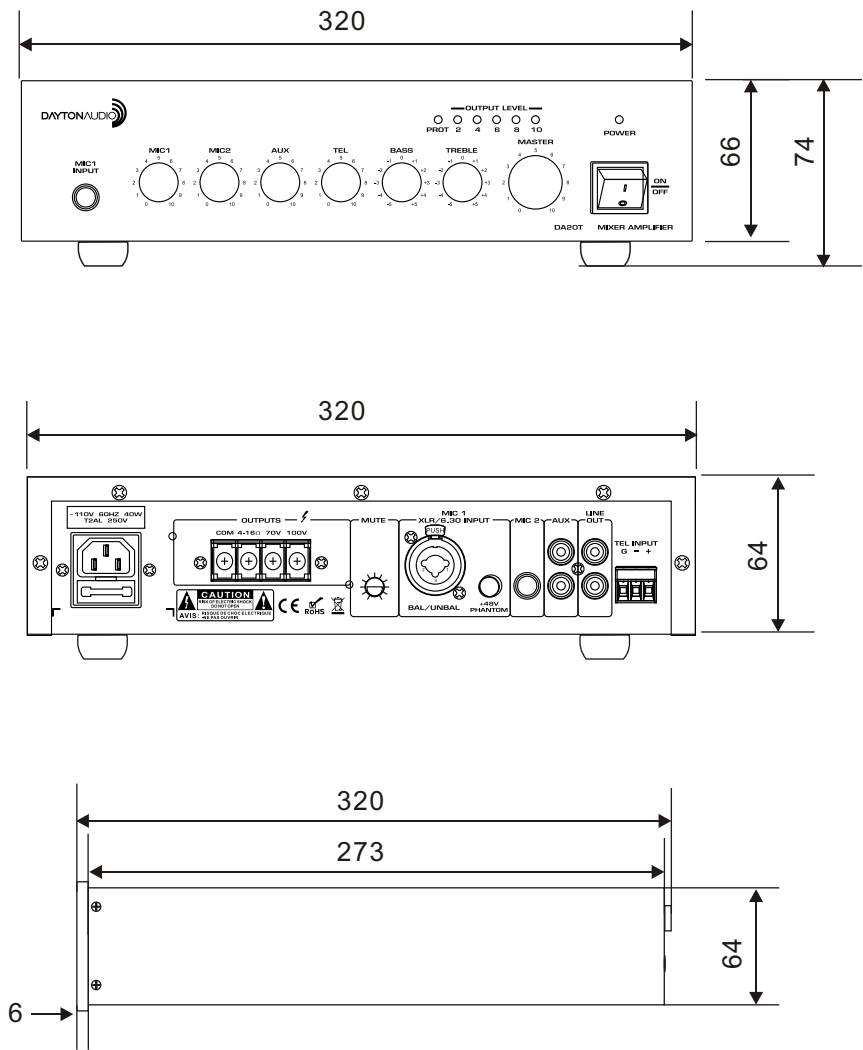

Keeps all sides of the product clear and free of objects that may obstruct the air flow and prevent proper cooling of the product.

UNIT: mm

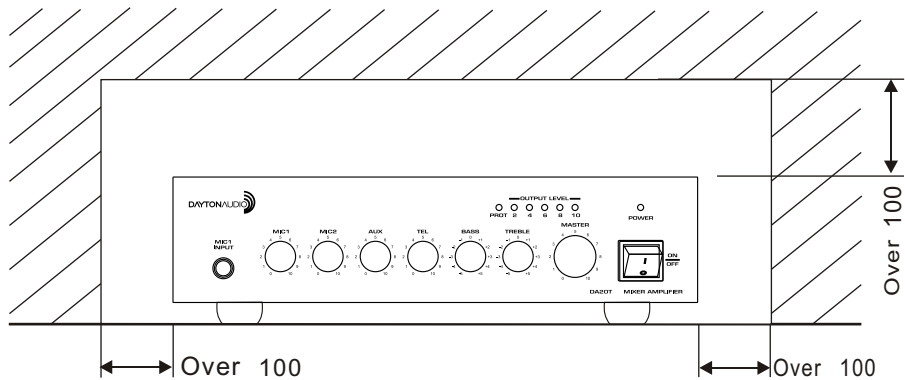

5-Year Limited Warranty
See daytonaudio.com for details



daytonaudio.com
tel + 937.743.8248
info@daytonaudio.com

705 Pleasant Valley Dr.
Springboro, OH 45066
USA

